



GREEN PERFORM HIGHBAY

Installation Instruction

Dimensions

Indoor Luminaire

I Bolt Mounting


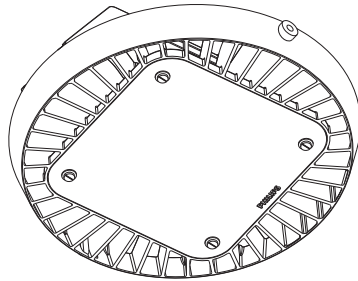
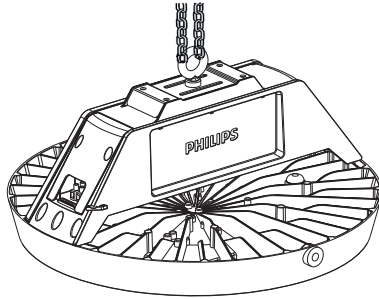


IP-65

Ta-45




TYPE	DIMENSIONS(mm)		
	D	W	H
	456	466	194

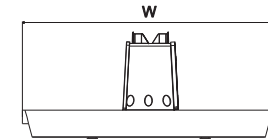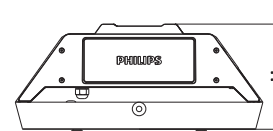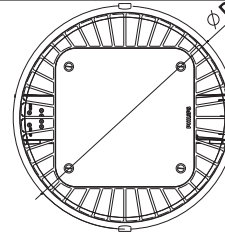


TYPE	: BY415P
LAMP	: LED
VOLTAGE	: 240 V, 50 Hz
IP CLASSIFICATION	: IP 65
NET WEIGHT	: 7.55 Kg.
MAX. PROJECTED AREA	: 0.16 m ²
CCT	: 6500 K
APPLICATION	: INDUSTRIAL HIGHBAY

PHILIPS


- 1 Take the luminaire out of Packing Box & lift up to the assembly location.

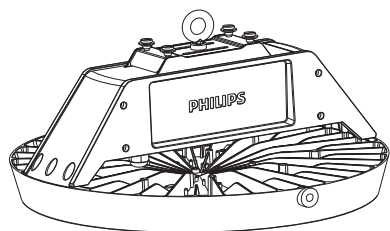


- 2 Hang the luminaire by suitable means.

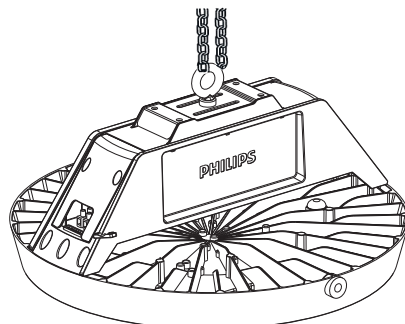


- 3 Rotate the luminaire so that plastic cover towards the installer for ease of installation/ maintenance. Remove the plastic cover by open 2 screws with screw-driver.

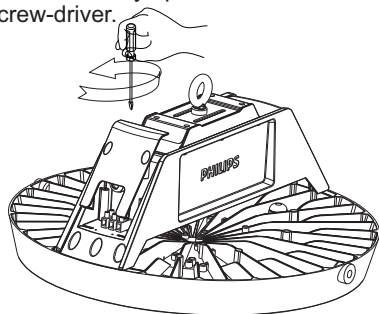

- 4 Insert the main wire and make L N E connections to the 3 Pole connector & put it through wire clamp. ** Plastic cover is connected to driver housing by nylon thread.

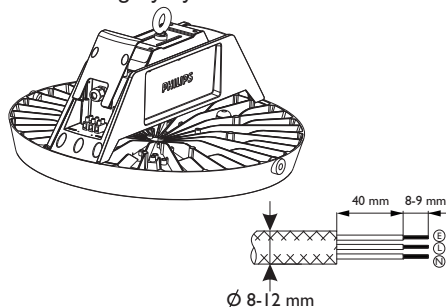


- 5 Make the electrical connections in 3 pole connectors as per the L N E marking.

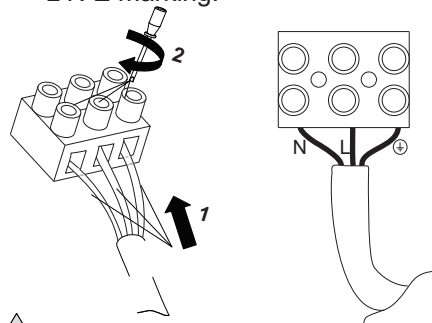


⚠ Notice: Correct connection for polarities

- 6 After connections, fit plastic cover snaps first and then position it in right manner for assembly.

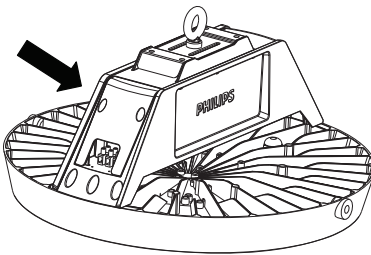

- 7 After positioning assemble the plastic cover & rotate the luminaire to its initial position.

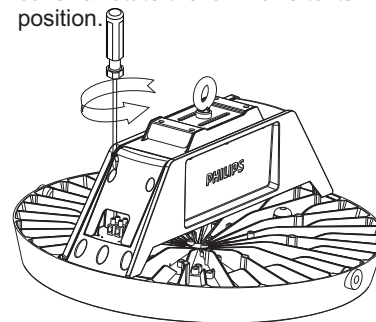

⚠ Notice: Product is ready to lit.

8

CAUTION

1. Ensure LNE is connected in right manner.
2. Ensure 3 core CABLE for Connections(diameter 8-12mm)
3. 3 Core cable should be properly connected with the help of wire clamp.
4. Ensure 1 bolt mounting properly with specified load(safety issue)
5. Ensure proper positioning of Cover Plastic before assembly..

FAILURE OF PRODUCT DUE TO NON COMPLIANCE TO ANY OF THE ABOVE,
VOIDS WARRANTY OF PRODUCT