



# The original!

## MASTER PL-S 2 Pin

MASTER PL-S is an efficient low-wattage compact fluorescent lamp, typically used for decorative and orientation purposes. The original Philips-invented bridge technology guarantees optimum performance in the application, enabling more light and higher efficacy than the bended technology. The 2-pin version is designed for operation on electromagnetic gear and is provided with a plug-in/pull-out lamp base

### Benefits

- Optimal light performance for short or long operation per switch-on
- Multiple light color choice
- Good color rendering (CRI >80)

### Features

- 2-pin base with a housing incorporating the special instant starter and capacitor
- Fluorescent tri-phosphor technology
- Low light depreciation over lamp life

### Application

- Application
- Designed for use in hotels, restaurants, theatres and homes
- Suitable for use in signs, corridors, security and orientation lighting

### Warnings and Safety

- Use only with electromagnetic control gear
- Lamp light technical and electrical characteristics are influenced by operating conditions, i.e. lamp ambient temperature and operating position
- Dimming is not possible
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.


# MASTER PL-S 2 Pin

## Versions



G23/GX23, 2P

## Dimensional drawing

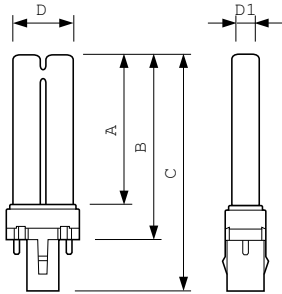

Product	D (max)	D1 (max)	A (max)	B (max)	C (max)
MASTER PL-S 9W/827/2P 1CT/ 5X10BOX	28 mm	13 mm	129 mm	145 mm	167 mm

