



# Beautiful sparkle, mini design

## MASTERColour CDM-Tm Mini PGJ5

Mini, single-ended, high-efficiency Ceramic Metal Halide discharge lamp producing crisp white sparkling light

### Benefits

- High-intensity beam of crisp white sparkling light makes merchandise look irresistible
- Stable color and lumen output over life keeps your store attractive season after season
- Fits in small luminaires which are less visible

### Features

- Crisp white sparkling light
- Excellent color rendering, with extra red
- High efficacy
- Stable color performance during lifetime
- Mini size

### Application


- Accent and display lighting in retail
- General and decorative indoor lighting
- Outdoor area lighting

# MASTERColour CDM-Tm Mini PGJ5

## Warnings and Safety

- Use only in totally enclosed luminaire, even during testing (IEC61167, IEC 62035, IEC60598)
- The luminaire must be able to contain hot lamp parts if the lamp ruptures
- Use only with electronic control gear
- Control gear must include end-of-life protection (IEC61167, IEC 62035)
- For 20W PGJ5 lamp, use only Philips electronic control gear HID PV mini PGJ5 20W
- For 35W PGJ5 lamp, use only Philips electronic control gear HID PV mini PGJ5 35W
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

## Dimensional drawing

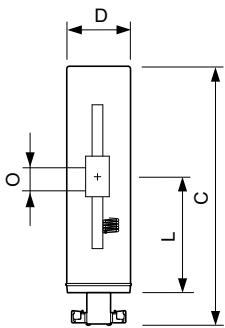

Product	D (max)	D	O	L (min)	L (max)	L	C (max)
MASTERColour CDM-	13.2 mm	0.44	4 mm	22.3	22.9 mm	22.6	52 mm
Tm Mini 35W/930		in		mm		mm	
PGJ5 1CT/12							

