



# ZXP399 DMX Controls and Accessories

## ZXP399 DMX controller 12V 8port

ZXP399 DMX Controls and Accessories - Black

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar).;DMX Controls include main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device.;Main Controller: Industrial computer that can control up to 6000 DMX universes.;Stand-alone Controller: Fits for medium applications with up to 700 DMX universes.;Wiring accessories include leader and jumper cables with male and female IP67 connectors and end-caps.;Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes.;DMX Amplifier: Compact, IP65 and low power repeater that can amplify the DMX signal for up to 100 meters.

### Product data

General Information	
Protection class IEC	Safety class III (III)
CE mark	CE mark
Material	Aluminum
Accessory color	Black
Operating and Electrical	
Input Voltage	12 DC V

Mechanical and Housing	
Overall length	228 mm
Overall width	197 mm
Overall height	66 mm
Approval and Application	
Ingress protection code	IP20 [ Finger-protected]

## ZXP399 DMX Controls and Accessories


### Product Data

Full product code	911401779642
Order product name	ZXP399 DMX controller 12V 8port
Order code	911401779642
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	1

Material Nr. (12NC)	911401779642
Net Weight (Piece)	1.550 kg



### Dimensional drawing

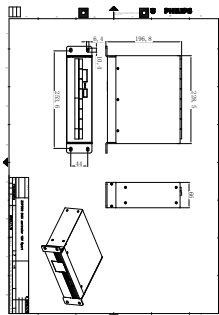

### Electrical accessory

