
# **LED HIGHBAY**

### **Installation Instruction**

## **I Bolt Mounting**

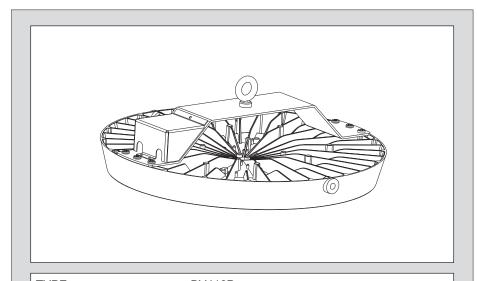

TYPE : BY416P

LAMP : LED

VOLTAGE : 240 V, 50 Hz

IP CLASSIFICATION : IP 65

NET WEIGHT : 7.0 Kg.

MAX. PROJECTED AREA: 0.16 m<sup>2</sup>

CCT : 5700 K

APPLICATION : INDUSTRIAL

Ta-45












### **Dimensions**

### **Indoor Luminaire**

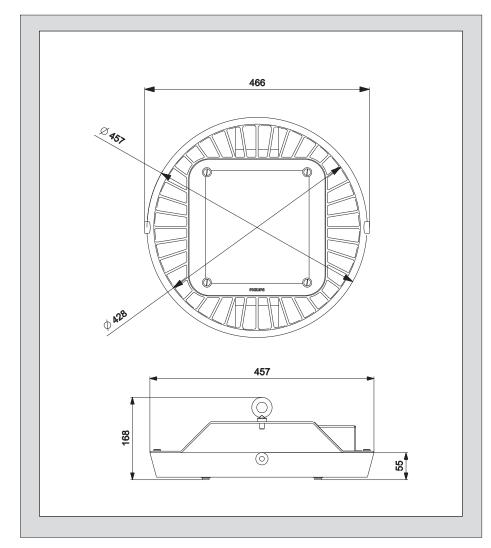





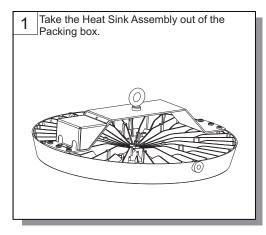


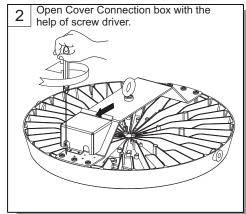

# 3 Insert a 3 core cable as per Led (+ve), Led (-ve), Earth marking label and grip it with wire clamp.

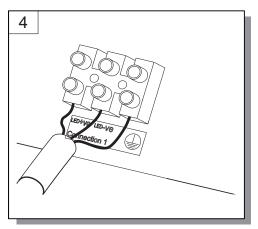

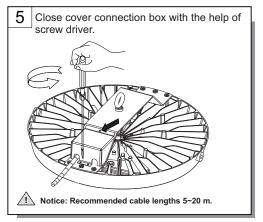

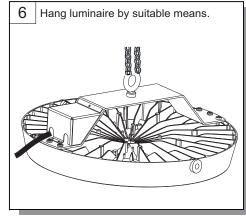

### 7 CAUTION

- 1. Ensure connection are done in the right manner.
- 2. For connections between driver output and LED engine, recommended conductor dia for each core is 1.0 sq. mm.
- 3. Use three core cable for connection.
- 4. All cables must be properly anchored with the help of wire grips.
- 6. For loop in loop out versions maximum four luminaries can be put in series.
- 7. Ensure all connections as per circuit label diagram of External Driver Box .
- 8.Use Surge protection (up to 10kV) to protect against surges/Use Type B+C surge type SPD in distribution box to arrest switching and lighting surges.

FAILURE OF PRODUCT DUE TO NON COMPLIANCE TO ANY OF THE ABOVE, VOIDS WARRANTY OF PRODUCT

